



## 7. Sunshade

### A: REMOVAL

- 1) Remove the glass lid. <Ref. to SR-5, REMOVAL, Glass Lid.>
- 2) Loosen the TORX® bolt to remove the front sunshade bracket.

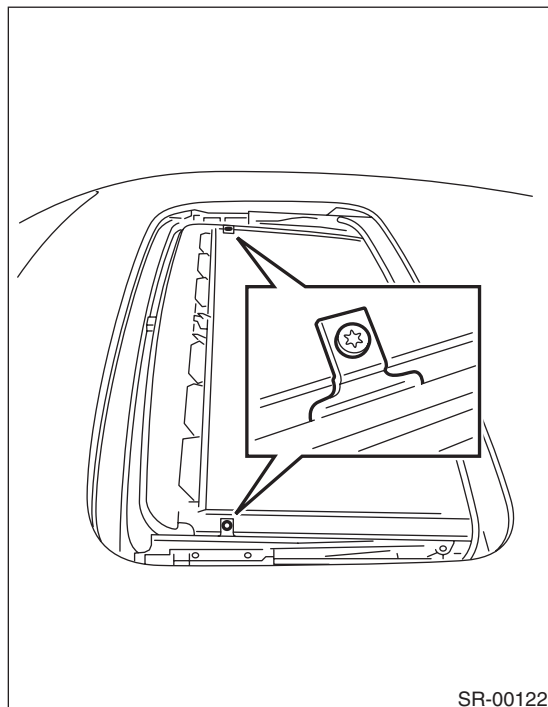

- 3) Pull the sunshade until the rear sunshade bracket comes into the sight, then loosen the TORX® bolts to remove the sunshade.

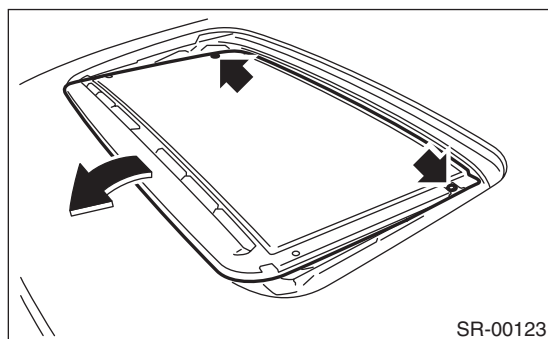


### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

#### 1. CHECK FOR MOVING LOAD OF SUNSHADE

- 1) Attach a spring scale to sunshade edge using a cloth.

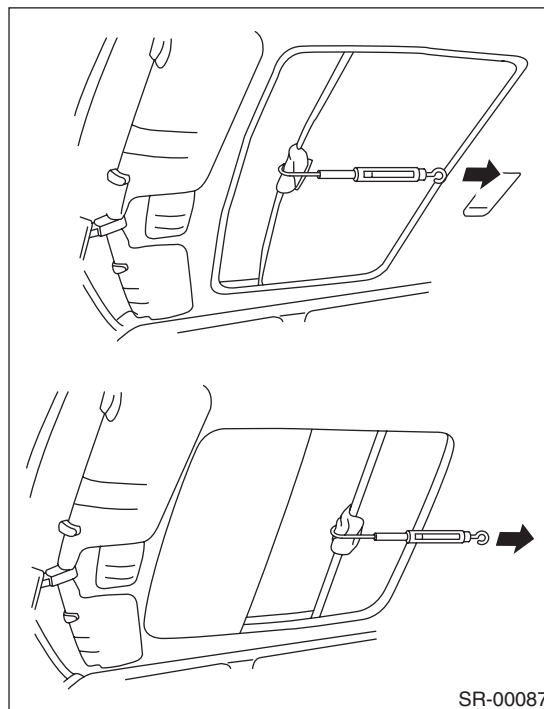

- 2) Pull the spring scale to measure moving load of the sunshade.

#### **Moving load of sunshade:**

##### **Specification**

**$18.0 \pm 5.0 \text{ N}$  ( $1.8 \pm 0.5 \text{ kgf}$ ,  $13 \pm 3.7 \text{ lbf}$ )**

#### **NOTE:**

Moving load is larger at the beginning of pulling a spring scale, so take a spring scale reading while sunshade sliding smoothly.

- 3) If moving load exceeds specifications, check the glass lid, sunshade and frame assembly for improper installation.

## Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

---

# EXTERIOR/INTERIOR TRIM



---

	Page
1. General Description .....	2
2. Front Under Cover .....	18
3. Fuel Tank Protector .....	19
4. Mud Guard .....	20
5. Front Grille .....	21
6. Front Bumper .....	22
7. Rear Bumper .....	29
8. Cowl Panel .....	30
9. Roof Spoiler .....	31
10. Side Garnish .....	32
11. Roof Molding .....	35
12. Roof Rail .....	36
13. Door Trim .....	37
14. Instrument Panel Lower Cover .....	38
15. Glove Box .....	39
16. Console Box .....	40
17. Center Console .....	41
18. Instrument Panel Assembly .....	42
19. Side Trim .....	45
20. Rear Quarter Trim .....	47
21. Floor Mat .....	49
22. Sun Visor .....	50
23. Assist Grip .....	51
24. Roof Trim .....	52
25. Rear Gate Trim .....	53
26. Rear Gate Garnish .....	54
27. Heat Shield Cover .....	55
28. Trailer Hitch .....	56